

Ice Maker

Check the Water Supply

1. Check the water line connections.

Check the Action of the Ice Tray, the Ice Valve and the Water Valve

1. Unplug refrigerator.
2. Plug the power supply cord back into the electrical outlet.

IMPORTANT: Within 15 minutes of the refrigerator being powered on:

3. Press and hold the SUPER FREEZE and FREEZER controls at the same time for 3 seconds to check the action of the ice tray.


If the ice tray has NOT turned after 15 minutes, the ice maker is faulty. Replace the ice maker.

Remove the Ice Maker

1. Open the freezer compartment door. Remove the ice bin and the ice maker cover.




2. Using a Phillips screwdriver, remove the two screws fastening the ice maker to the interior ceiling.

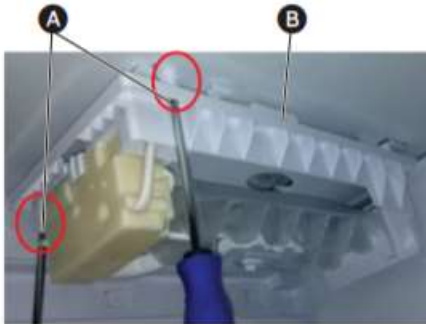

- A Screws (2)
- B Ice maker

3. Slide out, and then pull down on the ice maker assembly.

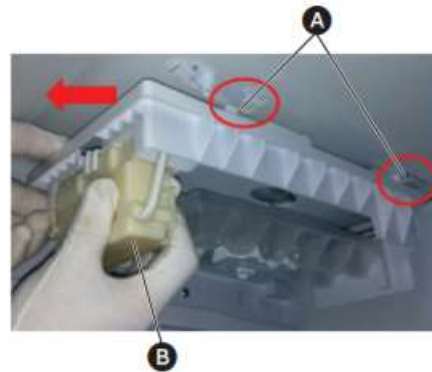

- A Clips
- B Motor

4. Disconnect the two terminals, and then remove the ice maker.

