

Freezer Lamp Replacement

- 1) Remove power from freezer
- 2) Remove side cover access door with 2 screws and slide off
- 3) Released the push clips that hold in the temperature knob and light.
- 4) Cut the 2 wires for the power led and then push the retaining clips pushing the light out the front of the bezel.
- 5) Install the new light and connect 2 wires to existing wiring ***using wire nuts or crimps, tech will need to provide.***
- 6) Install bezel and side bezel and don't forget to power freezer back up.
- 7) Unit should now have illuminated LED.

